




# HCWB3

## Healthy Climate® By-Pass Humidifier - 60Hz

### RESIDENTIAL PRODUCT SPECIFICATIONS

Bulletin No. 210543  
September 2011  
Supersedes May 2011

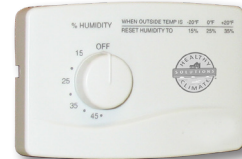


Manual Humidistat  
(furnished with standard Models)



Automatic Humidifier Control  
(furnished with "A" Models)

### MODEL NUMBER IDENTIFICATION

#### HCWB 3 - 17 A K

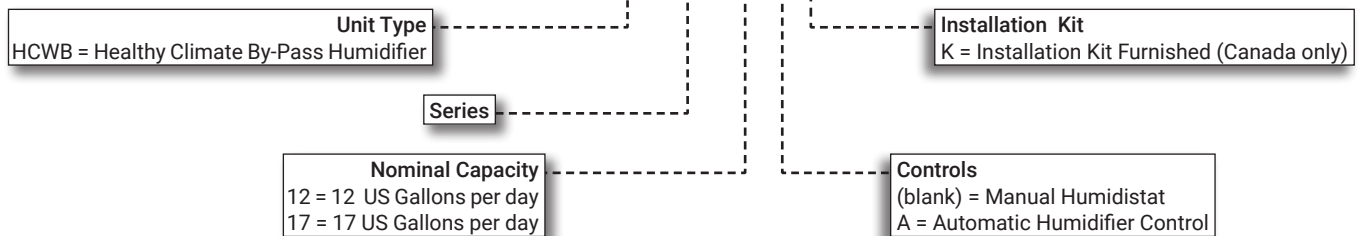

## CONTENTS

Approvals And Warranty . . . . .	2
Dimensions . . . . .	5
Features . . . . .	2
Humidifier Sizing Information . . . . .	4
Typical Applications . . . . .	5

## APPROVALS AND WARRANTY

### APPROVALS

- UL listed per ANSI/UL 998 and CSA C22.2 No.104-01

### WARRANTY

- All covered components:
  - Limited five years warranty in residential applications
  - Limited one-year in non-residential applications

**NOTE** - Refer to Lennox Equipment Limited Warranty certificate included with unit for specific details.

## FEATURES

### APPLICATIONS

- Applicable to most forced air installations
- Installs on the supply air plenum with a by-pass duct from the return plenum in upflow and horizontal applications
- Installs on the return air plenum with a by-pass duct from the supply plenum in downflow applications
- See Typical Applications
- Provides additional humidity to the home during the heating season to increase comfort level
- Do not install where freezing may occur
- Humidifier, saddle valve and manual or automatic humidifier control (depending on model) shipped in one package

### SEQUENCE OF OPERATION

- Humidifier will only operate when indoor blower is operating
- When the level of moisture in the return air or living space area drops below the set point of the humidifier control, the water solenoid valve opens
- Water flows into distribution tray and weeps down through the evaporator pad
- By-pass air flows over the evaporator pad, increasing the humidity of the air, and then back into the return air stream
- When the humidifier control is satisfied the water solenoid valve closes

### CABINET

- Rugged, corrosion resistant molded plastic
- Shipped for left-hand by-pass duct connection
- For right-hand by-pass duct connection, rotate humidifier cabinet 180° top for bottom and relocate drain spud
- See Installation Instructions for additional details
- Built-in damper included to close off bypass duct during summer cooling operation

### CONTROLS

#### **Manual Humidistat - HCWB3-12 and HCWB3-17**

- Can be horizontally mounted on wall or duct
- Provides manual control of room relative humidity
- Wired in series with the humidifier water solenoid valve
- Adjustable setting

#### **Automatic Humidifier Control - HCWB3-12A and HCWB3-17A**

- Duct mount only
- Automatic or manual mode control
- Manual Mode label (with resistor to bypass outdoor temperature sensor) are furnished to indicate when humidistat is installed in Manual Mode
- Senses duct air relative humidity and outdoor temperature
- Includes outdoor temperature sensor for use with automatic control option and resistor for manual control setting
- Adjusts humidity setpoint to provide optimum humidity levels within the space
- Adjustable setting

## FEATURES

### **WATER SUPPLY**

- Consists of supply tubing, orifice, distribution tray, cleanable/replaceable internal strainer and 24 volt brass water solenoid valve with stainless steel seat

### **Drain**

- 1/2 in. drain fitting at bottom of cabinet

**NOTE** - 1/2 in. ID plastic tubing must be field provided.

- Unused water from the evaporator pad is drained from the unit to help remove mineral deposits left from the evaporative process

### **Distribution Tray**

- Reservoir and unique polyester liner provides even water distribution across the evaporator media pad for optimal performance
- Tray and support frame removable for cleaning or replacement

### **Evaporator Media Pad**

- Provides large evaporation capacity
- Pad and support frame removable for cleaning or replacement

**NOTE** - Annual pad replacement recommended.


### **Saddle Valve**

- All necessary fittings furnished as standard equipment
- Field installs in the water supply line

## Optional Accessories

### **Healthy Climate® Digital Automatic Humidistat**

- Basic humidity control (on/off or proportional) and temperature display
- Control Buttons:
  - Power button
  - °F/°C display
  - Set button for changing humidity setpoints
  - SLEEP button for changing day/night modes
  - PRG button for programming timed settings and setting the clock
  - Up/Down buttons to change humidity setpoint and time
- Built-in humidity sensor
- Outdoor temperature sensor furnished
- 24VAC powered directly by the humidifier
- LCD with alphanumeric characters and icon graphics:
  - Humidity and Temperature (indoor/outdoor)
  - Humidity Mode
  - Sleep Mode
  - Auto Mode
  - Lock Mode
  - Program Timer On

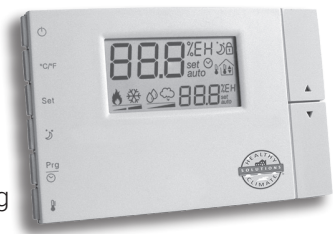

- Large LCD display shows humidity (or temperature) setpoint while the small display shows temperature (or time) setpoint
- Built-in clock (with backup) for automatic humidity control
- Two time settings per day
- Error code display
- Lock mode indicates a parameter has been set
- Dimension (H x W x D): 3-3/8 x 5-1/2 x 1-3/8 in.

### **Healthy Climate® Water Conductivity Test Kit**

- A conductivity meter is recommended for testing the water
- Measures total dissolved solids (TDS) and temperature
- Automatic Temperature Compensation (ATC)
- Water-resistant housing
- Measurement Range: 0-5000 ppm
- Digital Calibration (Push button)
- Auto-off function, data-hold function and low-battery indicator
- Display - Large and easy-to-read LCD screen includes simultaneous temperature reading
- Factory-calibrated with a 342 ppm NaCl solution
- The meter can be recalibrated with digital calibration using the Push buttons, rather than a screwdriver
- Includes cap and CR2032 battery



### **Bypass Humidifier Installation Kit**

Note - Furnished as standard with "K" models for Canada Only.

- Kit contains: 3 ft. of flexible bypass duct (6 in. dia.), bypass duct collar (6 in. dia.), 15 ft. of drain tubing (1/2 in. I.D.), 10 ft. of poly water supply tubing (1/4 in. O.D.) rated for water supply line, 10 ft. 24V low voltage wire, hose clamps (2), brass tubes (2) and ferrule plastic tubes (2)

## **MAINTENANCE SUPPLIES**

### **Replacement Media**

- Recommended annual replacement of media pad

## SPECIFICATIONS

Model No.	With Manual Humidistat Control	HCWB3-12	HCWB3-17
	With Automatic Humidifier Control	HCWB3-12A	HCWB3-17A
	<sup>1</sup> With Manual Humidistat Control and Installation Kit (Canada)	HCWB3-12K	HCWB3-17K
	<sup>1</sup> With Automatic Humidifier Control and Installation Kit (Canada)	HCWB3-12AK	HCWB3-17AK
Capacity - 120°F plenum temperature, 0.20 in. w.c. static pressure drop		12 US gallons per day	17 US gallons per day
Water Feed Rate (gallons per hour @ 50 PSI water pressure)		3	3
Evaporator pad size - H x W x D - in.		9-1/2 x 9-5/8 x 1-11/16	13 x 10 x 1-11/16
Connections	Plenum H x W - in.	9-1/2 x 9-1/2	12-3/4 x 10
	By-Pass Duct - in.	6 round	6 round
	Water supply	1/4 in. compression	1/4 in. compression
	Drain	1/2 in. I.D.	1/2 in. I.D.
Electrical characteristics		24V-60Hz, 0.5 amp	24V-60Hz, 0.5 amp
Shipping Data - lbs. (1 package)		8	9
<b>MAINTENANCE SUPPLIES - MUST BE ORDERED EXTRA</b>			
Replacement Media		<b>X2660</b>	<b>X2661</b>
<b>OPTIONAL ACCESSORIES - MUST BE ORDERED EXTRA</b>			
Healthy Climate® Digital Automatic Humidistat		<b>Y3760</b>	<b>Y3760</b>
Healthy Climate® Water Conductivity Test Kit		<b>Y3480</b>	<b>Y3480</b>
Bypass Humidifier Installation Kit (Not available in Canada)		<b>Y2960</b>	<b>Y2960</b>

<sup>1</sup> Canada only.

## HUMIDIFIER SIZING INFORMATION

(BASED ON VOLUME OF HOME)

Model No.	Type of Home	8 Foot Ceiling	9 Foot Ceiling	10 Foot Ceiling
		Home Area (sq. ft.)	Home Area (sq. ft.)	Home Area (sq. ft.)
HCWB3-12(A)(K)	Loose	750	666	600
	Average	1500	1350	1200
	Tight	3000	2700	2400
HCWB3-17(A)(K)	Loose	1000	888	800
	Average	2000	1800	1600
	Tight	4000	3600	3200

**NOTES:**


Loose Home = Two Air Change Rates per hour: Typically, loose in construction and is over 20 years old. Not very well insulated and may have single pane windows, etc.

Average Home = One Air Change Rate per hour: Average in construction, 15 to 20 years old on average.

Tight Home = One-Half Air Change Rate per hour: Newer home with tight construction..

Also see Healthy Climate Power Humidifier HCWP3 Product Specifications for additional sizing conditions if needed.

## DIMENSIONS

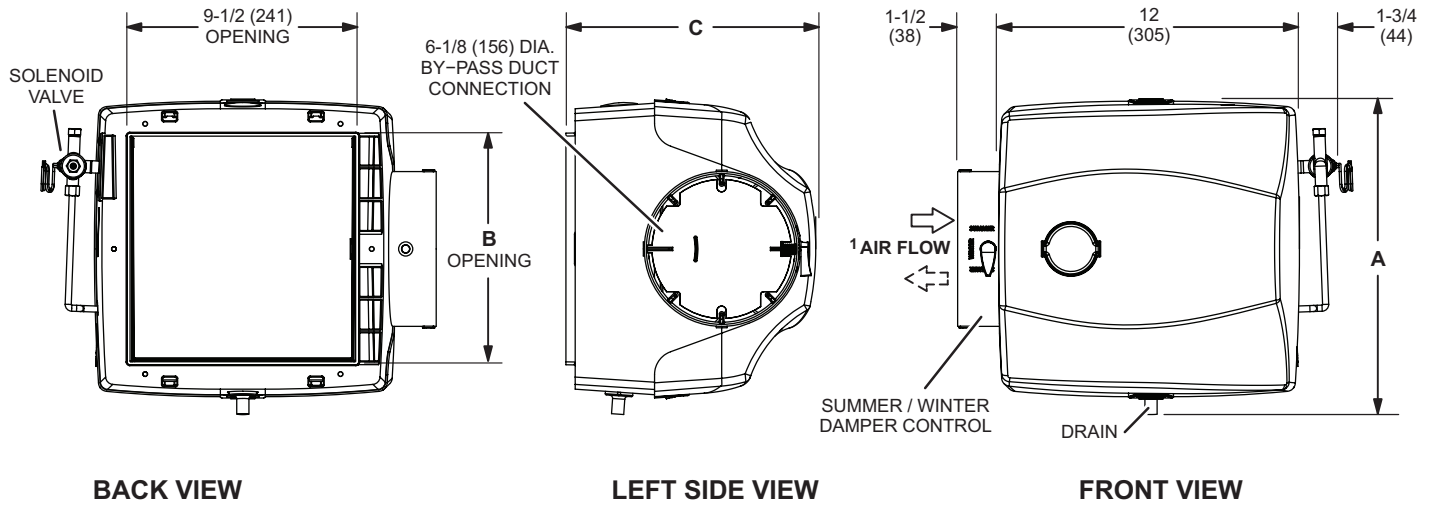

BACK VIEW

LEFT SIDE VIEW

FRONT VIEW




### NOTES:

- By-pass duct air flow direction is dependent on application.
  - For upflow/horizontal applications air flow is from the humidifier to return air duct.
  - For downflow applications, air-flow is to the humidifier from the supply air duct.

<sup>1</sup> Left hand air inlet/outlet shown. For right-hand inlet/outlet, rotate humidifier cabinet 180° top for bottom and relocate drain to alternate location on cabinet. See Installation Instructions for additional details.

Model No.	A		B		C	
	in.	mm	in.	mm	in.	mm
HCWB3-12(A)(K)	12-7/8	327	9-1/2	241	10-1/4	260
HCWB3-17(A)(K)	15-7/8	403	12-3/4	324	10-1/2	267

## TYPICAL APPLICATIONS

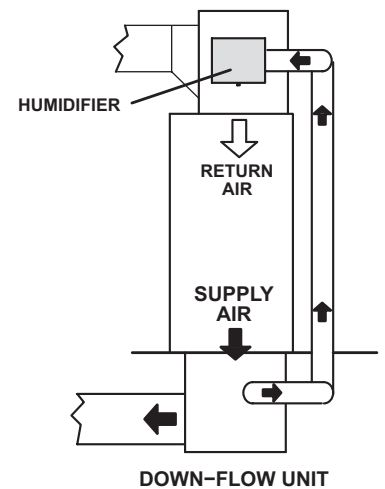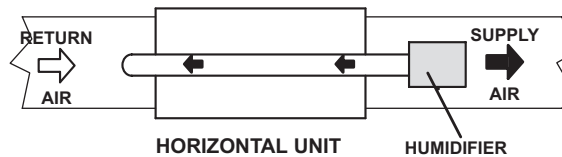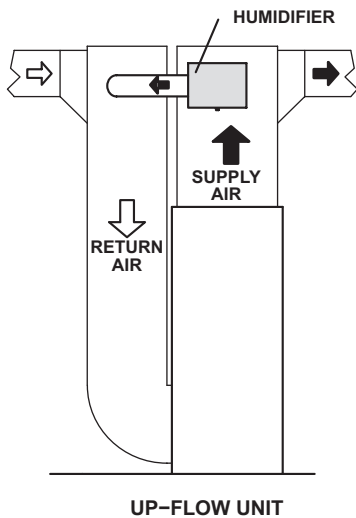





## REVISIONS

Sections	Description of Change
Optional Accessories	Added Healthy Climate® Digital Automatic Humidistat and Healthy Climate® Water Conductivity Test Kit.



Visit us at [www.lennox.com](http://www.lennox.com)

For the latest technical information, [www.LennoxPros.com](http://www.LennoxPros.com)

Contact us at 1-800-4-LENNOX

NOTE - Due to Lennox' ongoing commitment to quality, Specifications, Ratings and Dimensions subject to change without notice and without incurring liability. Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury. Installation and service must be performed by a qualified installer and servicing agency.

©2011 Lennox Industries, Inc.